 





ARNE JACOBSEN

Design: Arne Jacobsen

Designed in 1957 by celebrated Danish architect Arne Jacobsen, the ARNE JACOBSEN cutlery pattern is revered for its futuristic, yet ironically timeless design. Created originally for the SAS Royal Hotel in Copenhagen, the cutlery was highly controversial when launched in mid 1950's for its minimalism and architectural refinement ensuring a stark expression. The narrow form and the slender contours of ARNE JACOBSEN have made it a cult design classic. It has been featured in Stanley Kubrik's 2001: A Space Odyssey and other futuristic films making it one of Georg Jensen's most popular patterns. ARNE JACOBSEN is produced in matte stainless steel.

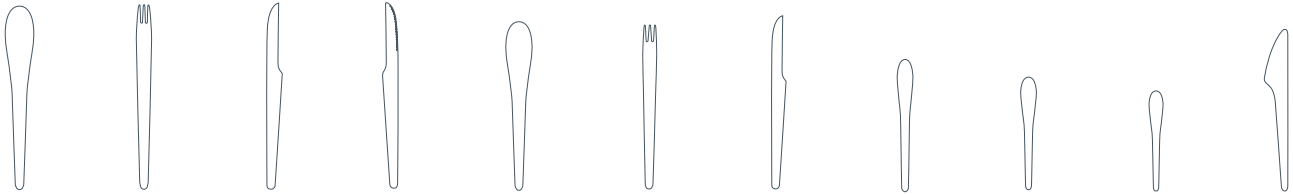

- | | | | | | | | | | | |
|---|--|---|---|--|---|---|--|--|---|---|
| 011
Spiseske
Dinner Spoon
Tafellöffel
20 cm /
8 inches | 012
Spisegaffel
Dinner Fork
Tafelgabel
20 cm /
8 inches | 014
Spisekniv,
langt skaft
Dinner Knife,
long handle
Tafelmesser,
langer Griff
20 cm /
8 inches | 017
Spisekniv,
langt skaft, grill
Dinner Knife,
long handle,
serrated
Tafelmesser,
langer Griff,
Wellenschliff
20 cm /
8 inches | 021
Dessertske
Dessert Spoon
Dessertlöffel
18,5 cm /
7 3/8 inches | 022
Forrets-/Frokost-/
Dessertgaffel
Starters/Lunch/
Dessert Fork
Vorspeise-/
Dessertgabel
18,5 cm /
7 3/8 inches | 025
Forrets-/Frokost-/
Dessertkniv
Starters/Lunch/
Dessert Knife
Vorspeise-/
Dessertmesser
19 cm /
7 1/2 inches | 031
Teske, stor/
Barneske
Tea Spoon, large/
Child's Spoon
Teelöffel, groß/
Kinderlöffel
15,6 cm /
6 1/8 inches | 033
Teske, lille
Tea Spoon, small
Teelöffel, klein
13,5 cm /
5 3/8 inches | 034
Kaffeske
Coffee Spoon
Kaffelöffel
11,4 cm /
4 1/2 inches | 046
Smørkniv
Butter Spreader
Buttermesser
16,5 cm /
6 1/2 inches |
|---|--|---|---|--|---|---|--|--|---|---|

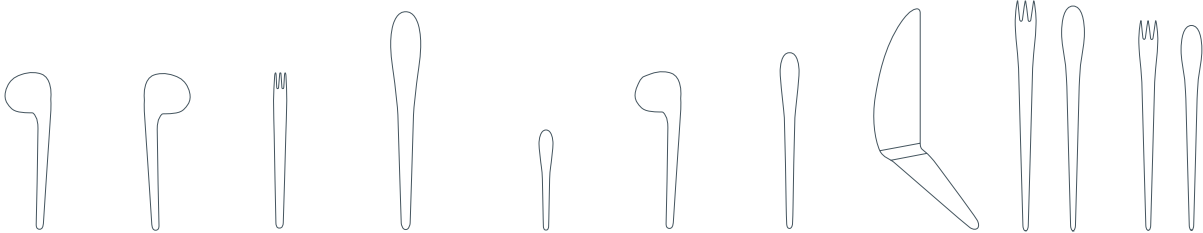 

- | | | | | | | | | | |
|--|---|---|--|---|---|---|--|---|--|
| 053
Suppe-/
Morgenmadsske,
højre hånd
Soup/
Breakfast Spoon,
right hand
Suppen-/
Frühstückslöffel,
rechte Hand
16,5 cm /
6 1/2 inches | 056
Suppe-/
Morgenmadsske,
venstre hånd
Soup/
Breakfast Spoon,
left hand hand
Suppen-/
Frühstückslöffel,
linke Hand
16,5 cm /
6 1/2 inches | 082
Barnegaffel/
Kagegaffel
Child's Fork/
Pastry Fork
Kindergabel/
Kuchengabel
16,5 cm /
6 1/2 inches | 111
Serveringsske
Serving Spoon
Vorlegelöffel
28 cm /
11 inches | 134
Espressoske
2 stk., gaveæske
Espresso Spoon
2 pcs., gift box
Espressolöffel
2 Stck.,
Geschenkbbox
11,4 cm /
4 1/2 inches | 153
Sauceske
Sauce Ladle
Saucenlöffel
16,5 cm /
6 1/2 inches | 178
Cafelatteske/
Isteske,
2 stk., gaveæske
Cafe Latte Spoon/
Ice Tea Spoon,
2 pcs., gift box
Caffè Latte-Löffel/
Limonadenlöffel,
2 Stck.,
Geschenkbbox
18,5 cm /
7 3/8 inches | 191
Kagespade
Pie Server
Tortenheber
25,5 cm /
9 7/8 inches | 502
Serveringssæt
Serving Set
Vorlegebesteck
32 cm /
12 5/8 inches | 503
Salatsæt
Salad Set
Salatbesteck
28,5 cm /
11 1/4 inches |
|--|---|---|--|---|---|---|--|---|--|

VEDLIGEHOEDESE AF STÅLBESTIK

BESTIK I BEDSTE STÅLKVALITET

Georg Jensen bestik i rustfrit stål er fremstillet i den bedst tilgængelige stålqualität rustfrit (stainless) 18/8 (18% krom og 8% nikkel).

SÅDAN VASKES RUSTFRIT STÅL

Vask og tør altid bestikket umiddelbart efter brug. Bestikket bør ikke ligge uvasket og heller ikke lægges i blød over længere tid, da det kan forårsage pletter. Ved maskinopvask skylles bestikket af, inden det placeres i maskinen. Undlad at vaske bestikket op sammen med produkter af jern da de kan afgive rust. Tør bestikket af umiddelbart efter opvaskemaskinen er færdig.

PAS GODT PÅ BESTIKKET

Ved at tage enkelte forholdsregler holdes bestikket pænt.

Forsøg at undgå stærkt klor og jernholdigt vand - det kan efterlade små rustpletter på bestikket.

Begræns så vidt muligt bestikkets kontakt med syre fra fødevarer - fødevarer såsom sennep og æg kan angribe stålet og give pletter.

Eventuelle pletter fjernes forsigtigt med Georg Jensen stålpuddsemiddel.

STAINLESS STEEL CUTLERY CARE

TOP QUALITY STEEL CUTLERY

Georg Jensen stainless steel cutlery is made of the best quality steel available: stainless 18/8 (18% chromium and 8% nickel).

HOW TO WASH STAINLESS STEEL

Always wash and dry the cutlery shortly after use. Avoid leaving the cutlery unwashed or leaving it to soak for a long period as this may result in spotting. When using a dishwasher, rinse the cutlery before placing it in the machine. Do not wash the cutlery with products made from iron as they may give off rust. Wipe the cutlery dry soon after the dishwasher has finished.

HANDLE WITH CARE

Keep the cutlery in good condition by taking a few precautions.

Try to avoid highly chlorinated or ferruginous water as this may leave small rust spots on the cutlery.

Try to limit the cutlery's contact with acids from food products. Food such as mustard and eggs can corrode the steel and cause spotting.

If spots occur, carefully remove the spots with Georg Jensen's steel polish.

PFLEGEHINWEIS FÜR EDELSTAHLBESTECK

BESTECK IN BESTER STAHLQUALITÄT

Georg Jensen Besteck aus rostfreiem Stahl wird aus der besten Stahlqualität hergestellt, die es gibt: Edelstahl rostfrei 18/8 (18 % Chrom und 8 % Nickel).

SO SPÜLEN SIE ROSTFREIEN STAHL

Das Besteck immer unmittelbar nach dem Gebrauch abwaschen und abtrocknen. Besteck sollte nicht benutzt liegen gelassen und auch nicht längere Zeit eingeweicht werden, da dies zu Flecken führen kann. Bei einer Reinigung in der Spülmaschine das Besteck abspülen, bevor es in den Besteckkorb gegeben wird. Das Besteck nicht zusammen mit Produkten aus Eisen spülen, da diese Rost abgeben können, und das Besteck direkt nach Beendigung des Spülvorgangs abtrocknen.

SO BLEIBT IHR BESTECK LANGE SCHÖN

Durch die Beachtung einfacher Verhaltensmaßregeln bleibt Ihr Besteck lange schön.

Stark chlor- und eisenhaltiges Wasser nach Möglichkeit vermeiden, da es kleine Rostflecken auf dem Besteck verursachen kann.

Den Kontakt des Bestecks mit säurehaltigen Lebensmitteln so weit wie möglich beschränken - Lebensmittel wie Senf und Eier können den Stahl angreifen und zu Flecken führen.

Flecken bei Bedarf vorsichtig mit Georg Jensen Stahlputzmittel entfernen.